## MECHANICAL FAUCETS 1301-GN2BVBE7CP

# CHICAGO FAUCETS

## Multiple Service Fixtures

#### **Product Type**

Deck Mounted Multiple Service Valves Combination Triple Service Fixture

#### **Features & Specifications**

- Multiple Service Valves
- Full Flow Nozzle
- Shank Assembly
- Secondary Control Valve
  - 6" Rigid / Swing Gooseneck Spout with Atmospheric

#### Vacuum Breaker

- Full Flow Nozzle
- 2-1/2" Cross Handle
- Slow Compression Operating Cartridge
- May Be Used with Most Laboratory Gases
- Atmospheric Vacuum Breaker, Not Intended for Continuous Pressure Applications
- 909 Valve is Certified for Gas Service per ANSI
   Z21.15b-2006/CSA 9.1b-2006 by the Canadian Standards
- Atmospheric Vacuum Breaker, Not Intended for Continuous Pressure Applications
- CFNow! Item Ships in 5 Days

#### **Performance Specification**

- Rated Operating Pressure: 0-0.5 PS
- Rated Operating Temperature: 40-140

#### Warranty

- Lifetime Limited Faucet Warranty
- 5-Year Limited Cartridge Warranty
- 1-Year Limited Finish Warranty

#### **Codes & Standards**

• ASSE 1001

Job Name	
Item Number	
Section/Tag	
Model Specified	
Architect	
Engineer	
Contractor	
[ ] Submitted as Shown	[ ] Submitted with Variations
Date	



Technical: 800/TEC-TRUE www.chicagofaucets.com


#### **1301-GN2BVBE7CP**

### Multiple Service Fixtures



#### **Architect/Engineer Specification**

Chicago Faucets No. 1301-GN2BVBE7CP, Deck Mounted Multiple Service Valves Combination Triple Service Fixture , Chrome Plated solid brass construction. Full Flow Laboratory Serrated Nozzle. Shank Assembly. May Be Used with Most Laboratory Gases. Atmospheric Vacuum Breaker, Not Intended for Continuous Pressure Applications. 909 Valve is Certified for Gas Service per ANSI Z21.15b-2006/CSA 9.1b-2006 by the Canadian Standards Association. Mounting hardware includedAtmospheric Vacuum Breaker, Not Intended for Continuous Pressure Applications. Secondary Control Valve: 6" Center to Center Rigid / Swing Gooseneck Spout with Atmospheric Vacuum Breaker. Full Flow Laboratory Serrated Nozzle. 2-1/2" Metal Cross handle(s) with Eight Point Tapered Broach and CW Button. Slow compression rebuildable cartridge, opens and closes 360° for fine adjustment, closes with water pressure, features square tapered stem. .

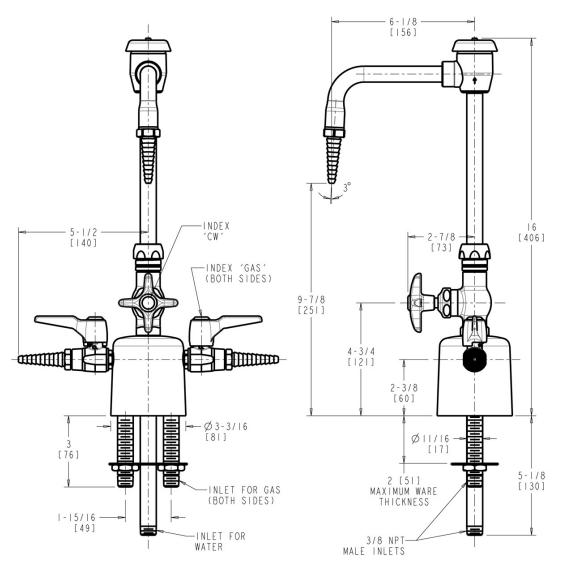

#### **Operation and Maintenance**

Installation should be in accordance with local plumbing codes. Flush all pipes thoroughly before installation. After installation, remove spout outlet or flow control and flush faucet thoroughly to clear any debris. Care should be taken when cleaning the product. Do not use abrasive cleaners, chemicals or solvents as they can result in surface damage. Use mild soap and warm water for cleaning and protecting the life of Chicago Faucet products. For specific operation and maintenance refer to the installation instructions and repair parts documents that are located at <a href="https://www.chicagofaucets.com">www.chicagofaucets.com</a>.

Chicago Faucets, member of the Geberit Group, is the leading brand of commercial faucets and fittings in the United States, offering a complete range of products for schools, laboratories, hospitals, office buildings, food service, airports and sport facilities. Call 1.800.TECTRUE or 1.847.803.5000 Option 1 for installation or other technical assistance.



2100 South Clearwater Drive Des Plaines, IL P: 847/803-5000 F: 847/803-5454 Technical: 800/TEC-TRUE